

******* CALL. 1L40 1L45 MOV' T PARTS LIST *******
ORIGINAL PARTS, MADE IN JAPAN

| <u>PART NAME</u> | <u>1L40</u> | <u>1L45</u> |
|-----------------------------------|-------------|-------------|
| BATTERY | 280-340 | 280-340 |
| BATTERY CONNECTOR SPRING | | 231-368 |
| BATTERY INSULATOR | | 230-220 |
| CANNON PINION WITH DRIVING WHEEL | | 028-306 |
| CLUTCH WHEEL | 064-790 | 064-790 |
| COIL UNIT | | 246-181 |
| DIAL WASHER | | 078-040 |
| ELECTRONIC CIRCUIT UNIT | | 279-A45 |
| FIFTH WHEEL AND PINION | 084-750 | 084-750 |
| FOURTH WHEEL AND PINION | | 023-328 |
| SECOND WHEEL | | 025-107 |
| FRICITION SPRING FOR SECOND WHEEL | | 903-106 |
| HOUR WHEEL | | 075-467 |
| INTERMEDIATE CHRONOGRAPH WHEEL | | 087-195 |
| INTERMEDIATE CHRONOGRAPH WHEEL(2) | | 087-196 |
| LOWER FIFTH PINION | | 020-070 |
| MINUTE WHEEL AND PINION | 072-126 | 072-126 |
| ROTOR | 285-175 | 285-175 |
| SCREW (1) × 1 | 923-107 | 923-107 |
| SCREW (2) × 2 | 923-112 | 923-112 |
| SCREW FOR DIAL GUARD × 3 | 922-940 | 922-940 |
| SETTING LEVER | | 067-194 |
| SETTING LEVER SPRING | | 077-136 |
| SETTING STEM | 065-477 | 065-477 |
| SETTING WHEEL | | 076-640 |
| SPACER FOR SETTING STEM | | 212-239 |
| STATOR | 190-152 | 190-152 |
| THIRD WHEEL AND PINION | | 017-149 |
| TRAIN WHEEL BRIDGE | | 701-E20 |
| YOKE | 071-136 | 071-136 |