

***** **CAL. 6L71 6L76 ALARM MOV'T PART LIST**
ORIGINAL PARTS, MADE IN JAPAN

MIYOTA

<u>PART NAME</u>	<u>6L71</u>	<u>6L76</u>
ALARM SWITCH SPRING	227-480	227-480
ALARM TIME CORRECTING WHEEL	213-290	213-290
ALM FRICTION SPRING FOR CORREC. WHEEL	903-131	903-131
BATTERY	280-720	280-720
BATTERY CONNECTOR SPRING	231-163	231-163
BATTERY INSULATOR	233-368	233-368
BATTERY STRAP	234-516	234-624
CANNON PINION WITH DRIVING WHEEL	028-113	028-137
CENTER WHEEL COCK	711-183	711-183
CLUTCH WHEEL	064-790	064-790
CLUTCH WHEEL GUARD	212-145	212-145
COIL UNIT	246-121	246-121
CONNECTOR FOR ELECTRONIC CIRCUIT	184-136	184-136
DATE DIAL	----	108-A40X
DATE DIAL DRIVING WHEEL	----	103-990
DATE DIAL GUARD	----	293-900
ELECTRONIC CIRCUIT UNIT	279-735	279-735
ELECTRONIC CIRCUIT UNIT FOR ALARM	279-577	279-577
FIFTH WHEEL AND PINION	084-460	084-460
FOURTH WHEEL AND PINION	023-205	023-224
FRICTION SPRING FOR UNLOCKING WHEEL	----	903-136
HOUR WHEEL	075-268	075-325
INTERMEDIATE ALARM TIME CORREC. WHEEL	087-600	087-600
LEAD CONNECTOR FOR UNLOCKING WHEEL	184-135	184-138
MINUTE WHEEL AND PINION	072-890	072-890
ROTOR	285-800	285-800
SCREW FOR FATE DIAL GUARD *	----	934-410
SCREW FOR POWER CELL STRAP *	922-111	922-111
SCREW FOR TRAIN WHEEL BRIDGE *	923-810	923-810
SCREW FOR UNLOCKING WHEEL HOLDER *	934-390	934-390
SETTING LEVER	067-173	067-173
SETTING LEVER SPRING	077-113	077-113
SETTING STEM FOR ALARM	065-394	065-394
SETTING STEM	065-387	065-387
SETTING WHEEL	076-640	076-640
SPACER FOR TRAIN WHEEL BRIDGE	027-101	027-101
STATOR	190-790	190-790
SWITCH CLICK STOP SPRING	267-130	267-130
THIRD WHEEL AND PINION	017-119	017-119
TRAIN WHEEL BRIDGE	701-B23	701-E70
UNLOCKING WHEEL	169-050	169-050
UNLOCKING WHEEL HOLDER	171-040	171-060
YOKE	071-970	071-970